



 


 


 

 






 

 
 

 
 

 


 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off	 Power	Menu Right	 Right
Mute	 Mute	Display	 +  Shift + Info
Epg	 +  Shift + Guide	Exit	 Exit
App	 Stop	Menu Down	 Down
Opt?	 Options	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	CH/Page+	 Ch +
Info	 Info	Volume-	 Vol -
TV	 TV/R	Audio	 Dual
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Menu Left	 Left	6mno	 6
OK Enter	 Ok	7pqrm	 7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8tuv		8	
9wxyz		9	
Guide Pilote		Guide	
0/10		0	
FAV Pref.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Freeze		Media	
Blue		Blue	
Interat	 + 	Shift + D. Menu	
Dev		3D	
	 + 	Shift + Ch +	
West		I<<	
Home Cinema		Smart	
Auth./DISEQC		Format	
	 + 	Shift + Ch -	
Dec/Pause		Pause	
Lang./Rewind		<<	
East		>>I	
H/V Play		Play	
LNB F.Forward		>>	

