
 






 
 
 







 
 





 
 





 


 




 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Stop		Stop	
Pause		Pause	
Subt.		Subt	
Auto/Track		Yellow	
Rep/A-B		TV/R	
Title		List	
Repeat/1/All		Text	
Zoom	 + 	Shift + Eject	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Return		Back	
Menu Down		Down	
Progr.		Sleep	
Volume+		Vol +	
Next		>>	
Volume-		Vol -	
Prev.		<<	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
+10		Guide	
0		0	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
EQ			Media
C/CH			Pre Ch
Digest			Smart
Record			Rec
R/L			Red
Rewind			<<
Pbc			Green
Video			D. Menu
3D			3D
Play			Play
Lang			Dual
F.Forward			>>
Setup			Options
Angle			Format
Open/Close			Eject

