



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Audio		Dual
	TV / STB		Shift + TV/R
	TV / R		TV/R
	Sleep		Sleep
	SUB		Subt
	TXT		Text
	Multi		Smart
	P / N		Shift + 1
	Recall		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6


 

 

 

 
 

 
 
 
 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	PGUP		Vol +
	PGDN		Vol -
	SAT		Shift + AV
	FAV +		Ch +
	FAV -		Ch -
	EPG		Guide
	Fav		Shift + Pre Ch
	Up / CH+		Up
	Right / Vol+		Right
	Down / CH-		Down
	Left / Vol-		Left
	OK		Ok
	Menu		Menu

 
 

 





 
 
 
 







**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Pause		Pause
	Zoom		Eject
	Edit		Format
	Info		Info
	USB		AV
	MP3		Media
	JPEG		Shift + Media
	PVR List		List
	PIP		Shift + Ok
	A - B		Back
	T.S.		Shift + 2
	Goto		Options

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	Rec		Rec
	<<		<<
	>>		>>
	Play / Pause		Play
	> <		Shift + Pause
	<<		<<
	>>		>>

