
 



 















 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Info		Info
	Aspect		Format
	Sleep		Sleep
	Backlight		Smart
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	1		1

**Originalfernbedienung Ersatzfernbedienung**

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	100		Guide
	RTN		Back

