

 

 





 

 

 


 
 



 






 













 


 
 

 
 
 











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	ShowView		3D
	AV		AV
	Direct Tv Rec		TV/R
	Rec		Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Cancel		Exit

**Originalfernbedienung    Ersatzfernbedienung**

	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	HDD		Media
	DVD		Smart
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu / Direct Navigator		D. Menu
	Menu / Play List		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right


 






Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Functions		Options
	Return		Back
	Prog/Check		Sleep
	Timer		Shift + AV
	Display		Info
	Time Slip		Text
	Dubbing		Subt
	Rec Mode		Shift + Rec
	I<< Skip		I<<
	Skip >>I		>>I
	A/Input Select		Eject
	B/Status		List
	C/AV Link		Yellow
	D/Manual Skip		Format
	Erase		Dual
	Audio		Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Position		Green
	Marker		Pre Ch





**Originalfernbedienung Ersatzfernbedienung**

TV 	Power		Power
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
INPUT SELECT 	A		Red
STATUS 	B		Green
AV LINK 	C		Yellow

**Originalfernbedienung Ersatzfernbedienung**

	D		Blue
--	---	--	------

