














 






 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	Smart/Colors		Shift + Smart
	Home		Smart
	CH+		Ch +
	CH-		Ch -

 
 
 







Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	Info		Info
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	left		Left
	OK		Ok
	Netflix		Shift + Media
	Prime Video		Format
	You Tube		Media
	Google Play		3D
	MTS		Options





Originalfernbedienung Ersatzfernbedienung

	Text		Text
	Sub		Subt
	TV		TV/R
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Stop		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung