



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Options		Options
	EPG		Guide
	Info		Info
	FAV		Pre Ch
	Menu		Menu


 

 
 


Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	V+		Vol +
	V-		Vol -
	P+		Ch +
	P-		Ch -
	Page+		>>
	Page-		<<
	SAT		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Recall		Blue





Originalfernbedienung   Ersatzfernbedienung

	Text		Text
	Tv/Radio		TV/R
	Subt		Subt
	STB/TV		Smart
	V.Format		Format

Originalfernbedienung   Ersatzfernbedienung