





 













 















 





 


 








 

 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down









Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





**Originalfernbedienung    Ersatzfernbedienung**







 













 













	9		9
	Menu		Menu / Home
	Help		Text / Goto
	0		0

**Originalfernbedienung    Ersatzfernbedienung**



 





 


 








 

 
















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung



















 



 




 
 


 


9 wxyz	9	BLUETOOTH 9	9
MENU	Menu	HOME MENU	Menu / Home
HELP	Help	GOTO TEXT	Text / Goto
0 _	0	HDMI - SAT 0	0

Originalfernbedienung Ersatzfernbedienung














 

























**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

















 





 
 










	9		9
	Menu		Menu / Home
	Help		Text / Goto
	0		0

Originalfernbedienung Ersatzfernbedienung



 















 



 

 














**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang / I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





**Originalfernbedienung**    **Ersatzfernbedienung**            **Originalfernbedienung**    **Ersatzfernbedienung**

	9		9
	Menu		Menu / Home
	Help		Text / Goto
	0		0

