
 
















 
 







Originalfernbedienung Ersatzfernbedienung

	Power STB		Power
	Red / Audio		Dual
	Mute		Mute
	TV / Rad		TV/R
	OPT.		Options
	EPG		Guide
	Red / Audio		Red
	Green / Stereo		Green
	Yellow / Text		Yellow
	Yellow / Text		Text
	Blue / Subtitle		Blue
	Blue / Subtitle		Subt
	Menu		Menu
	Exit		Exit
	Page+		Shift + Ch +
	Page-		Shift + Ch -
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	PVR		Smart
	Recall		Back
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Rec		Rec
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	USB		Media
	Bookmark		List
	Use Bookmarks		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	V/F		Format

Originalfernbedienung Ersatzfernbedienung