



















 































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Swap		Smart / List
	0		0
	Back		Back / Return
	FAV		Fav / Marker / PC
	Subtitle		Subtitle / EQ
	i		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Text		Text / Goto
	Vol+		Vol+
	Page+		Shift + CH+ /
	P+		CH+ / Page+
	Vol-		Vol-
	Page-		Shift + CH- /
	P-		CH- / Page-
	AD		Shift + Audio / Lang I/II
	Audio		Audio / Lang I/II
	Sound		Sound / Title
	Guide		Guide / EPG / -/-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down



