



Originalfernbedienung	Ersatzfernbedienung
 Timer On/Sleep	 Sleep
 FM Mode/Play	 TV/R
 Clock/Timer	 AV
 Function	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Digit	 Pre Ch
 Memory/Time	 Smart
 MP3/RDS	 Media

Originalfernbedienung	Ersatzfernbedienung
 Intro/PTY	 Ok
 I<<</>>>/Tuning	 I<<<
 >>>/>>>I/Tuning	 >>>I
 MP3 Folder/Preset Down	 Ch -
 MP3 Folder/Preset Up	 Ch +
 Stop/Band	 Stop
 Play	 Play
 Pause	 Pause
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Standby/On	 Power

