
 

 








Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Dimmer		Smart
	Sleep		Sleep
	Timer		AV
	Info / RDS		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Program		Shift + Sleep

Originalfernbedienung Ersatzfernbedienung

	FM Mode		Media
	<<		<<
	>>		>>
	Repeat 1 / All		Text
	Shuffle		TV/R
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Display		Shift + Info
	Menu		Menu
	Time Mode		3D
	Up		Up
	Left /  <<		Left
	Left /  <<		<<
	Enter		Ok
	Right / >>		Right
	Right / >>		>>




**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Tone / Bal		Dual
	Muting		Mute
	AUX 1		Shift + 1
	AUX 2		Shift + 2
	TUNER		Shift + 3
	CD		Shift + 4
	USB		Shift + 5
	SD		Shift + 6
	iPod		Shift + 7
	Volume+		Vol +
	Volume-		Vol -

**Originalfernbedienung Ersatzfernbedienung**