

 
 
 




 

 
 









 


 
 
 
 


 
 




 
 









 


 
 
 

 



 

 

 
 
 






Originalfernbedienung Ersatzfernbedienung



 

 


 

 







 




	Power		Power
	Eco/Energy		3D
	AV Mode		Shift + AV
	Input		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Eject

Originalfernbedienung Ersatzfernbedienung

	FAV/Mark/Char/Nu		Pre Ch
	Ratio		Format
	Mute/Delete		Mute
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Premium		Smart
	Q.Menu		D. Menu
	Home		Menu
	Back		Back
	Guide		Guide
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right




Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Subtitle		Subt
	T.Opt		Options
	Info		Info
	APP/*		Media
	AD	 + 	Shift + Subt
	Simplink		Sleep
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

