



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Phono		Red
	Tuner		Green
	CD		Yellow
	LD		Blue
	Tape 1		1
	Tape 2		2
	VCR 1		3
	VCR 2		4
	A/B/C/D/E		Smart
	Preset+		Ch +
	Preset-		Ch -
	I<< Skip CD		I<<
	Skip >>I CD		>>I
	Play CD		Play
	<< Search CD		<<
	Search >> CD		>>

Originalfernbedienung Ersatzfernbedienung

	Pause/Stop CD		Pause
	Disc Skip CD		Media
	Dir A		Guide
	Deck A/B		0
	Dir B		Pre Ch
	<<		Left
	Play		Ok
	>>		Right
	Stop		Up
	Rec Pause		Down
	Rec Mute		Rec
	Volume+		Vol +
	Volume-		Vol -
	Muting		Mute

