


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV / Video		TV/R
	V.Size		Eject
	PIP		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Pre Pg		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Menu / Sel		Menu
	Menu / Sel		Ok
	Exit		Exit
	Up / PG+		Up
	Up / PG+		Ch +
	Down / PG-		Down
	Down / PG-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	MTS		Media
	PG Info		Info
	Still		Pause
	Picture		Format
	Sound		Dual
	Sleep		Sleep





Originalfernbedienung Ersatzfernbedienung

 BRIGHT	Bright	 SETTINGS OPT	Options
 ERASE	Red / Erase	 A	Red
 TIME	Time	 TIMER AV	AV
 SKIP	Green / Skip	 B	Green
 INSERT	Yellow / Insert	 C	Yellow
 REPLACE	Blue / Replace	 D	Blue

Originalfernbedienung Ersatzfernbedienung

