 
 


 









 



 

 

 

 





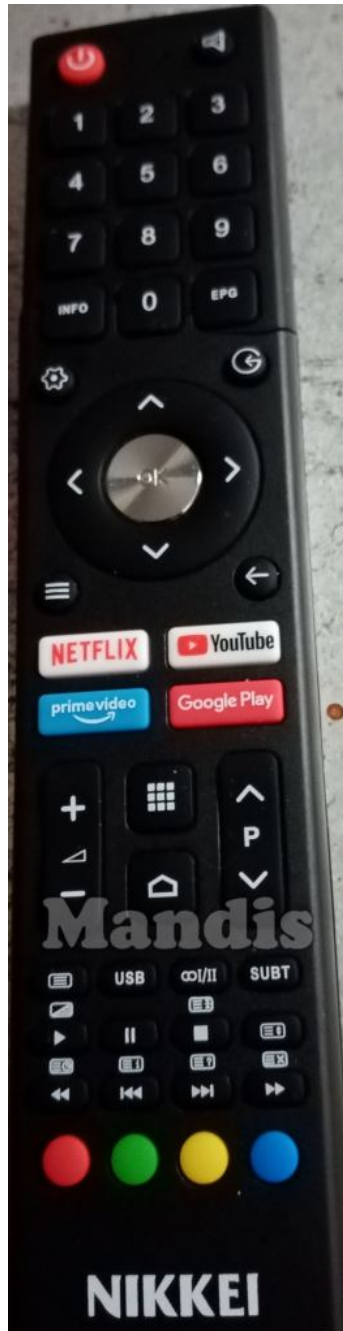
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	EPG		Guide / EPG / -/-
	Settings		Setup / OPT /
	Input		AV / Input / RDS
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Menu		Menu / Home
	NETFLIX		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Google Play		Shift + Green / APP /
	Vol+		Vol+
	Google Assistant		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-
	Home		D.Menu / Top
	Home		Display / Media
	P-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

Text	Text / Goto
USB	+ Shift + 8
I/II	Audio / Lang I/II
Subt	Subtitle / EQ
Play / Text Mix	Play / Slow
Pause	Pause / Step / Freeze
Stop / Text Hold	Stop / Hold
Text Size	Zoom / Size
<< / Text	<< / Tune-
I<< / Text Index	I<< / Preset-
>>I / Text Reveal	>>I / Preset+
>> / Text Cancel	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

