






 


 





 









 













 












**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Up / CH+		Up
	Up / CH+		Ch +
	Left / Vol-		Left
	Left / Vol-		Vol -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Down / CH-		Ch -
	Down / CH-		Down
	Enter		Ok
	Menu		Menu
	Red / P.M		Red
	Red / P.M		Format
	Green / S.M		Green
	Green / S.M		Shift + Dual
	Yellow / FAV		Yellow

**Originalfernbedienung    Ersatzfernbedienung**

	Yellow / FAV		Pre Ch
	Blue / SLP		Blue
	Zoom		Eject
	Freeze		Pause
	Blue / SLP		Sleep
	DSP / CAPS		Info
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





**Originalfernbedienung Ersatzfernbedienung**

	-/--		Guide
	Input		AV
	PIP		Smart
	POP		Media
	PIP-POS		Shift + Smart
	M.Win		TV/R
	Active-Win		Shift + TV/R
	Timer		Shift + AV
	Stereo		Dual
	Swap		Exit
	Text		Text
	Text Mix		Shift + Text
	Text Hold		Stop
	Text Update		Options
	Text Reveal		Subt
	Text Size		Shift + Eject

**Originalfernbedienung Ersatzfernbedienung**