



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TDT / A		Smart
	16:9 / B		Format
	SAT / C		Media
	AUX / D		AV
	INF / E		Info
	Sleep / F		Sleep
	TV/RA		TV/R
	EPG		Guide
	Red / Text		Red
	Red / Text		Text
	Green / Back		Green
	Green / Back		Back
	Yellow / Subtitle		Yellow
	Yellow / Subtitle		Subt
	Blue / Audio		Blue
	L/R		List

Originalfernbedienung Ersatzfernbedienung

	Blue / Audio		Dual
	Up		Up
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Right / Vol+		Right
	Right / Vol+		Vol +
	Down		Down
	Exit		Exit
	Menu		Menu
	<<		<<
	<<		Ch -
	>>		>>
	>>		Ch +
	1		1
	2		2
	3		3





Originalfernbedienung   Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Pause		Pause
	Mute		Mute
	F1		Shift + 1
	F2		Shift + 2
	F3		Shift + 3
	F4		Shift + 4
	F5		Shift + 5

Originalfernbedienung   Ersatzfernbedienung


