















 



 

 

 



 

 











 



 





 











 







Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0

Originalfernbedienung	Ersatzfernbedienung
	 Guide
	 Pre Ch
	 Shift + Guide
	 Shift + Pre Ch
	 Red
	 Green
	 Up
	 Yellow
	 Blue
	 Format
	 Left
	 Shift + Green
	 Shift + Yellow
	 Right
	 Text
	 Info
	 Down



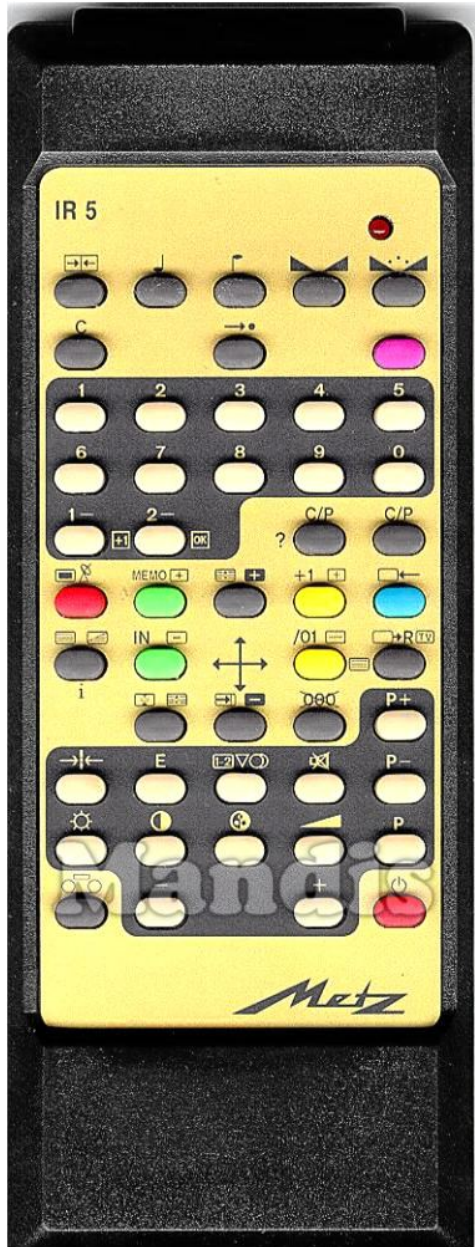

Originalfernbedienung	Ersatzfernbedienung
	SHIFT + Shift + 0
	Ch +
	Ch -
	HOME SMART Smart
	SHIFT + Shift + Exit
	SOUND DUAL Dual
	CLEAR EXIT Exit
	MUTE Mute
	I<<
	<<
	>>
	AD SUBT Subt
	Vol +
	Vol -

Originalfernbedienung	Ersatzfernbedienung

