


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	On Screen		Info
	1		1
	Repeat		Text
	2		2
	Program		Shift + Sleep
	3		3
	Surround		List
	4		4
	Sound		Shift + Dual
	5		5
	Zoom		Shift + Eject
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	0		0
	Sleep		Sleep
	Aspect		Format
	Source		AV
	Color Mode		Media
	Break		Exit
	Play		Play
	<<		<<
	Pause		Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	>>I		>>I
	Top Menu		D. Menu
	Top Menu		Shift + Menu
	Menu		Menu
	Up		Up



