


































Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --

Originalfernbedienung Ersatzfernbedienung

	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[]		Display / Media
	[+]		Stop / Hold

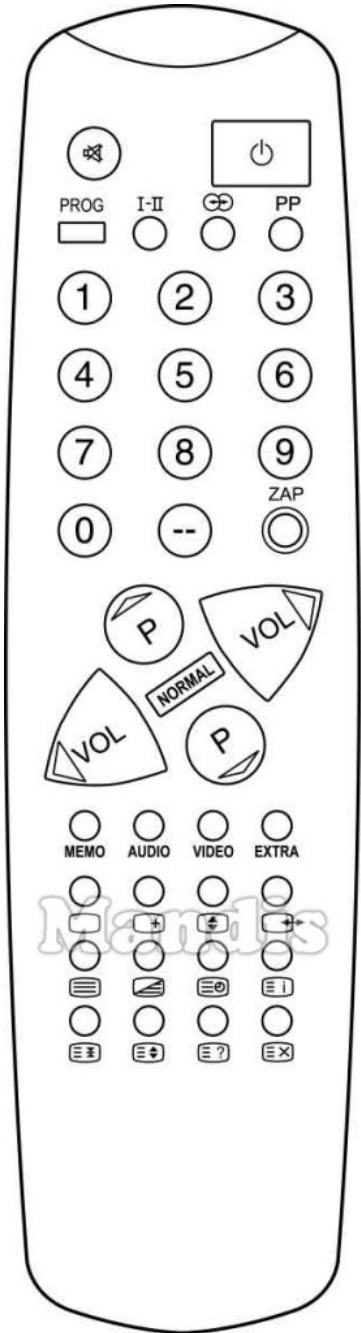


Originalfernbedienung **Ersatzfernbedienung**

	[♦]	OPT-TOOLS SETUP	Setup / OPT /
	[↔]	TOP MENU D.MENU	D.Menu / Top
	[≡]	GOTO TEXT	Text / Goto
	[/ ≡]	SHIFT + GOTO TEXT	Shift + Text /
	[≡ ⇨]	EQ SUBTITLE	Subtitle / EQ
	[≡ ⇨]	ANGLE INFO	Info / Angle
	[≡ □]	STEP - FREEZE 	Pause / Step / Freeze
	[≡ ♦]	SIZE ZOOM	Zoom / Size
	[≡ ?]	RDS AV INPUT	AV / Input / RDS
	[≡ X]	CLEAR EXIT CANCEL	Exit / Cancel / Clear

Originalfernbedienung **Ersatzfernbedienung**

