














 



 

















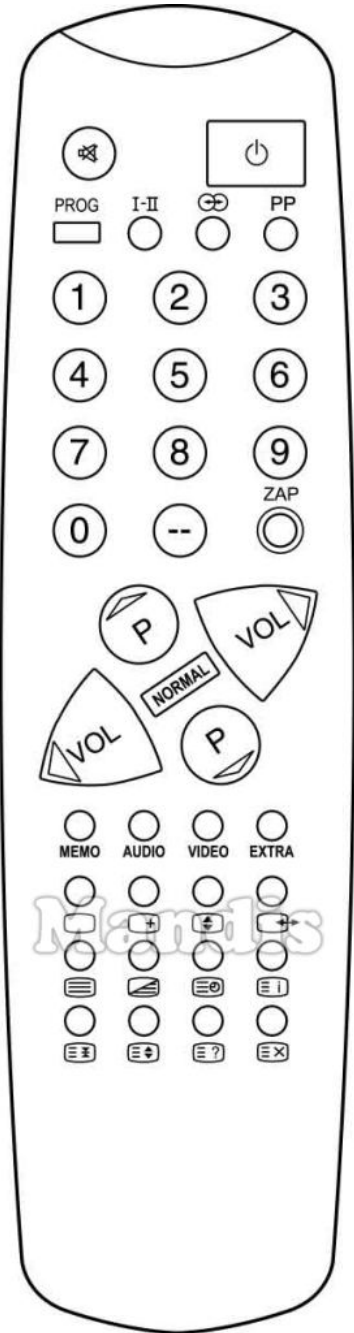
Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --






















Originalfernbedienung Ersatzfernbedienung

	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[ ]		Display / Media
	[ + ]		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	[ ◆ ]		Setup / OPT /
	[ ]↔		D.Menu / Top
	[ ≡ ]		Text / Goto
	[ /≡ ]	 + 	Shift + Text /
	[ ≡ ⊕ ]		Subtitle / EQ
	[ ≡ i ]		Info / Angle
	[ ≡ □ ]		Pause / Step / Freeze
	[ ≡ ◆ ]		Zoom / Size
	[ ≡ ? ]		AV / Input / RDS
	[ ≡ X ]		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung