


 







 







 

 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Guide		Guide
	Back		Back
	Exit		Exit
	Up		Up
	Left		Left







Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH- / Page-		Ch -
	CH+ / Page+		Ch +
	V-		Vol -
	V+		Vol +
	Menu		Menu
	i		Info
	Mute		Mute
	Text		Text
	Audio		Dual
	Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

	MHP		Smart
	OPT+		Options
	Source		AV

Originalfernbedienung Ersatzfernbedienung

