





 


 
 







 

 
 
 



 

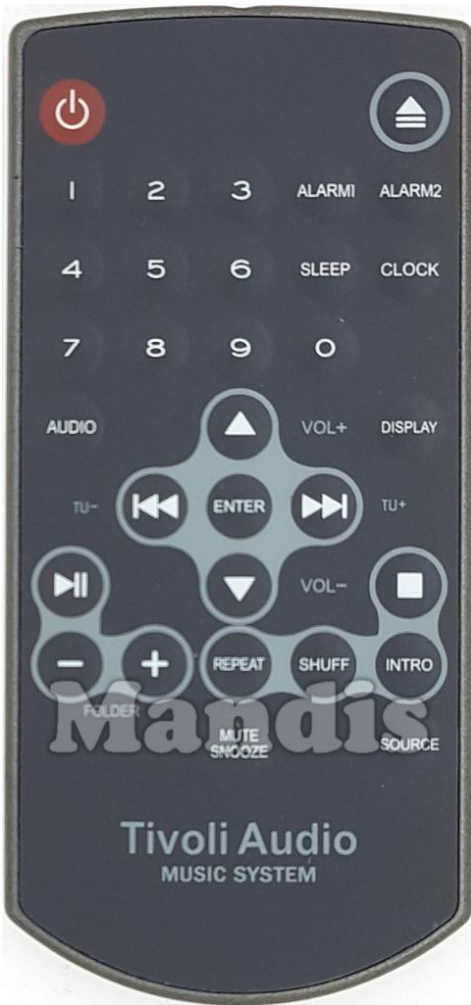

**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
ALARM1	Alarm1		Red
ALARM2	Alarm2		Blue
CLOCK	Clock	 + 	Shift + AV
SLEEP	Sleep		Sleep
DISPLAY	Display		Info

**Originalfernbedienung    Ersatzfernbedienung**

	Audio		Dual
	Source		AV
	Mute Snooze		Mute
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	>> /Tu+		>>
	<</Tu-		<<
	Stop		Stop
	Play		Play
	Pause		Pause
	Repeat		Text
	Shuff		Media





Originalfernbedienung Ersatzfernbedienung

INTRO	Intro	GUIDE	Guide
+	Folder+	+ CH	Ch +
-	Folder-	- CH	Ch -

Originalfernbedienung Ersatzfernbedienung