


 



 
 











 





 

 





 




 


 
 



 
 
 
 




 
 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off	 Power	Menu Left	 Left
Lang./Rewind	 +  Shift + Dual	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
App	 Smart	Exit	 Exit
Epg	 +  Shift + Guide	Menu Down	 Down
Opt?	 Options	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	CH/Page+	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
TV	 TV/R	Audio	 Dual
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 +  Shift + Info	6mno	 6



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
7pqrm	 7	Lang./Rewind	 <<
8tuv	 8	H/V Play	 Play
9wxyz	 9	LNB F.Forward	 >>
Guide Pilote	 Guide		 +  Shift + Ch -
0/10	 0		
FAV Pref.	 Pre Ch		
Red	 Red		
Dev	 List		
West	 I<<		
Green	 Green		
Yellow	 Yellow		
East	 >>I		
Freeze	 Stop		
Blue	 Blue		
Dec/Pause	 Pause		
Browse	 Media		
	 +  Shift + Ch +		

