



Originalfernbedienung **Ersatzfernbedienung**

	Power		Power
	Computer		Comp / Video
	S-Video/Video		Shift + Comp / Video
	Color Mode		Mode
	Menu		Menu
	AV Mute		Blank / Mute
	Pause/Freeze		Freeze / Timer
	E.Zoom+		+ / Play
	E.Zoom-		- / Stop
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Enter
	Auto		Auto
	ESC		Eco / Aspect

Originalfernbedienung **Ersatzfernbedienung**

