


















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Update		Play / Slow
Reveal		Pause / Step / Freeze
Txt Stop		Stop / Hold
Tone-		<< / Tune-
Tone+		>> / Tune+
Contrast-		l<< / Preset-
Contrast+		>>l / Preset+
Color- S.Std		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
4.# 16:9		Picture / Format
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

Store Text		Setup / OPT /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-



