



Originalfernbedienung Ersatzfernbedienung

|   |              |   |              |
|---|--------------|---|--------------|
|    | Standby      |    | Power        |
|    | Open / Close |    | Eject        |
|    | 1            |    | 1            |
|    | 2            |    | 2            |
|    | 3            |    | 3            |
|    | 4            |    | 4            |
|    | 5            |    | 5            |
|    | 6            |    | 6            |
|    | 7            |    | 7            |
|    | 8            |    | 8            |
|  | 9            |    | 9            |
|  | 0            |    | 0            |
|  | Search       |  +  | Shift + TV/R |
|  | Clear        |    | Exit         |
|  | Program+     |    | Ch +         |
|  | Program-     |    | Ch -         |
|  | Return       |    | Back         |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |         |
|---|--------------|---|---------|
|    | HDD/DVD      |    | Media   |
|    | Up           |    | Up      |
|    | Left         |    | Left    |
|    | Select       |    | Ok      |
|    | Right        |    | Right   |
|    | Down         |    | Down    |
|    | Setup        |    | Options |
|    | TV/DVD       |    | Smart   |
|    | Video Source |    | AV      |
|    | Function     |    | D. Menu |
|  | Playlist+    |  | Vol +   |
|  | Playlist-    |  | Vol -   |
|  | Watch TV     |  | TV/R    |
|  | Play/Pause   |  | Play    |
|  | Play/Pause   |  | Pause   |
|  | Stop         |  | Stop    |
|  | Record/DUB   |  | Rec     |





Originalfernbedienung Ersatzfernbedienung

|             |             |                    |               |
|-------------|-------------|--------------------|---------------|
| SKIP        | I << Skip   | SKIP               | I <<          |
| SKIP        | Skip >>I    | SKIP               | >>I           |
| SEARCH      | << Search   | SEARCH             | <<            |
| SEARCH      | Search >>   | SEARCH             | >>            |
| EDIT        | Edit        | A                  | Red           |
| INSERT CHP. | Insert CHP. | B                  | Green         |
| REC MODE    | Rec Mode    | SHIFT +  REC MODE  | Shift + Rec   |
| TIMER       | Timer       | SHIFT +  AV        | Shift + AV    |
| PLAY MODE   | Play Mode   | SHIFT +  PLAY MODE | Shift + Play  |
| REPEAT      | Repeat      | REPEAT             | Text          |
| ZOOM        | Zoom        | SHIFT +  ZOOM      | Shift + Eject |
| A-B         | A-B         | SHIFT +  REPEAT    | Shift + Text  |
| SUBTITLE    | Subtitle    | AD SUBT            | Subt          |
| AUDIO       | Audio       | SOUND DUAL         | Dual          |
| ANGLE       | Angle       | PICTURE FORMAT     | Format        |
| TITLE       | Title       | DISC NAV LIST      | List          |
| MENU        | Menu        | TOP MENU MENU      | Menu          |

Originalfernbedienung Ersatzfernbedienung

|         |         |              |      |
|---------|---------|--------------|------|
| DISPLAY | Display | DISPLAY INFO | Info |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |
|         |         |              |      |

