 



 
 


 




 
 

 





 

 

 
 
 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Setting		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	OSC		Guide
	Clear		Exit
	Home2		Media
	Home		Smart

Originalfernbedienung Ersatzfernbedienung

	Pop Up Menu		D. Menu
	Return		Back
	Top Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Repeat		Text
	A-B		TV/R
	Goto		List
	Display		Info
	<</<<		<<
	Play/Pause		Play
	>>/ >>		>>
	<<		<<
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	I>/II>		Pause
	>>I		>>I
	Red/Program		Red
	Red/Program		Sleep
	Green/Digest		Green
	Yellow/Zoom		Yellow
	Yellow/Zoom		Shift + Eject
	Blue/Bookmark		Blue
	Subtitle		Subt
	Audio		Dual
	PIP		Format
	PIP Audio		3D
	Angle		Pre Ch
	HDMI		AV

Originalfernbedienung Ersatzfernbedienung

