
 

 
 
 
 


 



 





 





 












 

 

 
 
 
 

 



 




 









 





Originalfernbedienung Ersatzfernbedienung








 
	Red / -1		Red
	Green / +1		Green
	Yellow / Stop		Yellow
	Blue / [= ?]		Blue
	[=] / [TV]		Text
	1		1
	I<< Video		I<<
	2		2
	>>I Video		>>I
	3		3
	Tint-		Media
	Tint+		Smart
	4		4
	5		5
	6		6
	Contrast-		Left
	Rec Video		Rec

Originalfernbedienung Ersatzfernbedienung

	Contrast+		Right
	Stop Video		Stop
	7		7
	<< Video		<<
	8		8
	>> Video		>>
	9		9
	*-		Down
	Pause Video		Pause
	*+		Up
	Play Video		Play
	0 / AV		0
	Up / P+		Ch +
	i		Info
	P / C		Back
	Left / Vol-		Vol -
	OK		Ok





Originalfernbedienung	Ersatzfernbedienung
 Right / Vol+	 Vol +
 Mute	 Mute
 Down / P-	 Ch -
 Power	 Power

Originalfernbedienung	Ersatzfernbedienung

