




 



 



 











Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Power		Power
	CBL/SAT		0
	DVD		2
	Blu-ray		5
	GAME		Fav / Marker / PC
	AUX		7
	MEDIA PLAYER		Display / Media
	TV AUDIO		1
	8K		4
	TUNER		6
	USB		8
	CD		3
	Bluetooth		9
	Heos		Smart / List
	PHONO		AV / Input / RDS
	INTERNET		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	CH/Page+		CH+ / Page+
	ECO		Menu / Home
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Info		Info / Angle
	Option		Shift + Setup / OPT / Tools
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	I<< / Tune-		<< / Tune-
	I<< / Tune-		I<< / Preset-



RADIO



Originalfernbedienung Ersatzfernbedienung



	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	>>I / Tune+		>>I / Preset+
	>>I / Tune+		>> / Tune+
	Smart Select 1		Shift + Red / Netflix /
	Smart Select 2		Shift + Green / APP /
	Smart Select 3		Shift + Yellow / YouTube /
	Smart Select 4		Shift + Blue / Prime Video /
	Sound Mode Movie / Green		Green / APP / Repeat
	Sound Mode Music / Red		Red / Netflix / Search
	Sound Mode Game / Blue		Blue / Prime Video / Random
	Sound Mode Pure / Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung







 
 



 














**Originalfernbedienung    Ersatzfernbedienung**

	Sleep		Sleep / Timer
	Power		Power
	CBL/SAT		0
	DVD		2
	Blu-ray		5
	GAME		Fav / Marker / PC
	AUX		7
	MEDIA PLAYER		Display / Media
	TV AUDIO		1
	8K		4
	TUNER		6
	USB		8
	CD		3
	Bluetooth		9
	Heos		Smart / List
	PHONO		AV / Input / RDS
	INTERNET		Guide / EPG / -/-

**Originalfernbedienung    Ersatzfernbedienung**

	CH/Page+		CH+ / Page+
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	I<< / Tune-		I<< / Preset-
	I<< / Tune-		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>I / Tune+		>> / Tune+
	>>I / Tune+		>>I / Preset+



RADIO



Originalfernbedienung

Ersatzfernbedienung

1	Smart Select 1		Red / Netflix / Search
2	Smart Select 2		Green / APP / Repeat
3	Smart Select 3		Yellow / YouTube / Repeat
4	Smart Select 4		Blue / Prime Video / Random

Originalfernbedienung

Ersatzfernbedienung