



 


 



 
 



 
 






 











 
 
 
 



 
 


 


 

 

 


 

 

 

Originalfernbedienung Ersatzfernbedienung

Power ON/Off		Power
Mute		Mute
Every Pop		Subt
Vol Rs-/Effect		Down
Sleep		Sleep
Tape 1 Preset	 + 	Shift + Options
Preset Pause	 + 	Shift + Pause
Vol Rs+/S.Mode		Up
Funct./Direct		Ok
Tape 2 Pre./eq	 + 	Shift + Dual
Woofers/Speed		Right
CD Random		TV/R
Repeat		Text
Tape 1 Stop	 + 	Shift + Stop
Next/Prog+		>>
CD/Theater		List
Tape 1 Hall/Ats	 + 	Shift + Subt

Originalfernbedienung Ersatzfernbedienung

Input/Source		AV
CD Play		Play
Display		Info
CD Rewind		<<
Stop		Stop
CD F.FWD		>>
Prev./Prog-		<<
Volume+		Vol +
Volume-		Vol -
Pr 1		1
Pr 2		2
CD Pause		Pause
Pr 3		3
Pr 4		4
Pr 5		5
Pr 6		6
Phono/Scan		Media



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Pr 7		7	
Tuner/Bypass		Menu	
Surround/Test		Dual	
Pr 8		8	
Intro		Options	
Pr 9		9	
Mode		Guide	
X-Bass/Bgm		Left	
Tape 1 Rec	 + 	Shift + Rec	
Fm Mode/Disc		Exit	
Tape 1 Rew	 + 	Shift + <<	
Tape 1 Play	 + 	Shift + Play	
Pr 0/10		0	
Program		Pre Ch	
Tape 1 F.FWD		Blue	
Band		Smart	
Track-/Echo	 + 	Shift + Vol +	
Classic Track		Ch +	
Timer/A.Track		Ch -	
Index+/Vol Ls+	 + 	Shift + Ch +	
Track+/Karaoke	 + 	Shift + Vol -	
Index-/Vol Ls-	 + 	Shift + Ch -	

