



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SUBTL		Subt
	TV / Sat		AV
	16:9		Format
	Sleep		Sleep
	Up / CH+		Up

Originalfernbedienung Ersatzfernbedienung

	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Menu		Menu
	Exit		Exit
	TXT		Text
	EPG		Guide
	Info		Info
	Audio		Dual
	M-P		Smart
	Page+		>>
	Page-		<<





Originalfernbedienung Ersatzfernbedienung

	Red / SAT		Red
	Green / Zoom		Green
	Green / Zoom		Eject
	Yellow / Pause		Yellow
	Yellow / Pause		Pause
	Blue / TV/Radio		Blue
	Blue / TV/Radio		TV/R
	FAV		Pre Ch
	Recall		Back

Originalfernbedienung Ersatzfernbedienung


