









 





 
 








 



 

 

 



 
 


 






 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Smart		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Guide		Guide / EPG / -/--
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Google Play		Display / Media







 





 






 

 
 

Originalfernbedienung Ersatzfernbedienung

	prime video		Shift + Blue / Prime
	Home		Shift + Menu /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Red		Red / Netflix / Search





**Originalfernbedienung Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Text		Text / Goto
	Subt		Subtitle / EQ
	Audio		Audio / Lang I/II

**Originalfernbedienung Ersatzfernbedienung**