

 

 
 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 




 

 

 


 





 

 
 

 

 
 

 




Originalfernbedienung Ersatzfernbedienung

	ON		Power
	OFF		AV
	MUTE		Mute
	MENU		Menu
	1 / INPUT 1		1
	2 / INPUT 2		2
	3 / INPUT 3		3
	4 / INPUT 4		4
	5 / INPUT 5		5
	6 / INPUT 6		6
	7 / INPUT 7		7
	8 / FRONT		8
	9 / TUNER		9
	0 / DIMMER		0
	TEST		Text
	VOL+		Vol +
	VOL-		Vol -





 

 

 
 
 

 

 
 
 
 
 
 

 








Originalfernbedienung Ersatzfernbedienung

	SCAN/TUNE		Ch +
	SCAN/TUNE		Ch -
	UP		Up
	DOWN		Down
	LEFT		Left
	RIGHT		Right
	ENTER		Ok
	SURRE.		Dual
	PRESET PREV.		<<
	PRESET NEXT		>>
	SLEEP		Sleep
	INFO / DISP.		Info


 










 


 
 

 



 

 





Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Disp/Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tune Scan >>		>>

Originalfernbedienung Ersatzfernbedienung

	<< Scan Tune		<<
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<< Preset		I<<
	Play/AM/FM/DB		Play
	Preset >>I		>>I
	Red/Rand/Tuner		Red
	Green/RPT/Blen		Green
	Yellow/Prog/Memo		Yellow
	Blue/Clear/Delete		Blue



