







 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	SD/USB- PVR		Smart / List
	Time		Sleep / Timer
	Mute		Mute / Dimmer
	Vol+		Vol+
	Source		AV / Input / RDS
	Ch+		CH+ / Page+
	Vol-		Vol-
	Mode		Picture / Format
	Ch-		CH- / Page-
	Tv/Radio		TV/Radio /
	Eject		Eject / Surround
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	L/R		Display / Media
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Subtitle / PC Auto		Subtitle / EQ
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	<<		<< / Tune-
	Left		Left
	Ok		OK
	Right		Right
	Fav		Fav / Marker / PC
	>>		>> / Preset+
	Down		Down
	>>		>> / Tune+
	Epg		Guide / EPG / -/-
	I<<		I<< / Preset-
	TTX/MIX		Text / Goto
	Info/Display		Info / Angle
	Red/Dvd Menu		Red / Netflix / Search









Originalfernbedienung Ersatzfernbedienung

	Red/Dvd Menu		D.Menu / Top	
	Green/Lang		Green / APP / Repeat	
	Green/Lang		+ 	Shift + Audio / Lang I/II
	Yellow/Repeat		Yellow / YouTube / Repeat	
	Yellow/Repeat		+ 	Shift + Green / APP /
	Blue/Dvd Setup		Blue / Prime Video / Random	
	Blue/Dvd Setup		Setup / OPT /	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	-/--		+ 	Shift + Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	0		0
	Return		Back / Return

