




 



 
 
 

 
 
 


 
 



 

 

 


 
 

 
 



 


 
 



 
 




Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Opt?	 	Options
Info	 	Info
App	 	Media
Subt.List	 	Subt
Sleep Timer	 	Sleep
TV	 	TV/R
Video	 	D. Menu
Text	 	Text
Display	 +  	Shift + Info
Zoom	 	Eject
Menu	 	Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok

Originalfernbedienung Ersatzfernbedienung

Menu Right		Right
Exit	 	Exit
Menu Down		Down
Audio	 	Dual
Back	 	Back
Volume+	 	Vol +
CH/Page+	 	Ch +
Volume-	 	Vol -
CH/Page-	 	Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
9wxyz		9	 Shift + Ch +
Guide Pilote		Guide	 Shift + Ch -
0/10		0	
Tune-		I<<	
Sys/Serv		Smart	
Aft/Caf		3D	
Tune+		>>I	
FAV Pref.		Pre Ch	
Red		Red	
Freeze		Pause	
East		Rec	
Green		Green	
Lang./Rewind		<<	
H/V Play		Play	
LNB F.Forward		>>	
Yellow		Yellow	
Blue		Blue	

