




































Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------|
|  | Power |  | Power |
|  | Open/Close |  | Eject |
|  | VCR |  | Smart |
|  | DVD |  | Media |
|  | Input |  | AV |
|  | 1/Tracking- |  | 1 |
|  | 2 |  | 2 |
|  | 3/Tracking+ |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | System |  | D. Menu |
|  | Clear |  | Exit |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------------|
|  | Setup |  | Options |
|  | Display |  | Info |
|  | Title/PBC |  | Back |
|  | Menu |  | Menu |
|  | Up/PR+ |  | Up |
|  | Down/PR- |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK/Enter |  | Ok |
|  | Subtitle |  | Subt |
|  | Audio |  | Dual |
|  | Search |  | Shift + TV/R |
|  | Zoom |  | Shift + Eject |
|  | << |  | << |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >> |  | >> |



