
 
 

 


 



 

 



 





 

 

 
 




 
 

 

 





 





 
 
 





 
 

 
 
 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------|
|  | Power |  | Power |
|  | Sleep |  | Sleep |
|  | Internet Radio |  | Shift + 1 |
|  | Online Music |  | Shift + 2 |
|  | Music Server |  | Shift + 3 |
|  | Optical |  | Shift + 4 |
|  | Coaxial |  | Shift + 5 |
|  | Analog |  | Shift + 6 |
|  | Bluetooth |  | Shift + 7 |
|  | iPod/USB |  | Shift + 8 |
|  | I<< |  | I<< |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >>I |  | >>I |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | ADD Favorites |  | 3D |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------|
|  | CALL Favorites |  | Pre Ch |
|  | Tone |  | Smart |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Top Menu |  | Menu |
|  | Info |  | Info |
|  | Search |  | TV/R |
|  | Setup |  | Options |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|----------------|--------|-----------------------|--------|
| 4 GHI | 4 | 4 | 4 |
| 5 JKL | 5 | 5 | 5 |
| 6 MNO | 6 | 6 | 6 |
| 7 PQRS | 7 | 7 | 7 |
| 8 TUV | 8 | 8 | 8 |
| 9 WXYZ | 9 | 9 | 9 |
| 0 .* | 0 | 0 | 0 |
| +10 d/A | +10 | GUIDE | Guide |
| CLEAR | Clear | CLEAR EXIT | Exit |
| RANDOM | Random | APP MEDIA | Media |
| REPEAT | Repeat | REPEAT TEXT | Text |
| MODE | Mode | PICTURE FORMAT | Format |
| DIMMER | Dimmer | AD SUBT | Subt |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

