
 


 



 

 


 
 











 
 

 


 
 












 

 


 
 
 
 
 
 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
POWER		6	
SOURCE		7	
EXIT		8	
MENU		9	
MUTE		0	
Q. MENU		EPG	
TEXT		FOLDER	
OK		V+	
UP		V-	
DOWN		P+	
RIGHT		P-	
LEFT		SLEEP	
1		BACK	
2		PRESETS	
3		SUB / LANG.	
4		RED / ZOOM	
5		GREEN /	



REPEAT

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
YELLOW / ROOT	 Yellow	> < / SIZE	 3D
BLUE / TITLE	 +  Shift + Blue	INTERNET	 +  Shift + Smart
SKIP PREV.	 I<<	RECALL	 Pre Ch
SKIP NEXT	 >>I	i	 Info
STOP	 Stop	NETFLIX	 Smart
PAUSE	 Pause		
REC	 Rec		
REW	 <<		
PLAY	 Play		
BLUE	 Blue		
	 +  Shift + Menu		
FAV/SEARCH/1	 +  Shift + 1		
FAV/DISC/2	 +  Shift + 2		
YOUTUBE	 Media		
TV	 TV/R		
SUBTITLE	 Subt		
MULTIMEDIA	 +  Shift + Media		

