
 











 




Originalfernbedienung Ersatzfernbedienung

	Operate		Power
	Sleep		Sleep
	Function		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	>10		Guide
	Mode		Format
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Band		TV/R
	Tune+		>>
	Tune-		<<
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Mega Xpand		Options
	Mega Bass		Subt

