



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Search		TV/R
	Prog/Direct		Sleep
	Clear		Exit
	Call		Pre Ch

**Originalfernbedienung    Ersatzfernbedienung**

	Dimmer		Shift + Info
	YouTube		Media
	Netflix		Shift + Smart
	Vidu		Shift + Media
	Info		Info
	Home		Smart
	Power AMP		Shift + Power
	Source Up		Ch +
	Source Down		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Top Menu		Menu
	Pop Up Menu		D. Menu
	Return		Back
	Setup		Shift + Options
	Up		Up





**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	<<		<<
	Play		Play
	>>		>>
	l<<		l<<
	Pause		Pause
	Stop		Stop
	>>l		>>l
	Repeat		Text
	A-B		Shift + Back
	Random		AV
	Pure		Format
	Subtitle		Subt
	Angle		List

**Originalfernbedienung Ersatzfernbedienung**

	Audio		Dual
	Option		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Video Resolution		3D
	DVD a Page		Shift + AV
	Disc Layer		Shift + Format
	Picture Adjust		Shift + 3D

