



 
















 
 
 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	TV		Smart
	Video		AV
	DVD		Media
	TTX		Text
	Setup		Options
	Title		List
	Menu		Menu
	Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	-/--		Guide
	PRE		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	M/S		TV/R
	Skip		Shift + Right
	Sleep		Sleep
	TV. Menu		D. Menu
	P.STD		Format
	S.STD		Dual
	Up		Up
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Right		Right
	Down		Down
	P.Size		Shift + Format
	Exit / Cancel		Exit
	Mute		Mute
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	<< / <I Slow		<<
	>> / Slow I>		>>
	I<< / <II Step		I<<
	>>I / Step II>		>>I
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Mix / A-B		3D
	Index / Repeat		Shift + Text
	L/F / Audio		Shift + Dual
	Size / Subtitle		Subt
	Reveal / Goto		Shift + Smart
	Holds / Program		Shift + Sleep
	Prepage / Angle		Shift + Ch -
	Nextpage / Surr		Shift + Ch +
	Store / Clear		Shift + Exit
	Subpage /		Shift + Eject

