








 







 

 



 

 

 

 











 






























Originalfernbedienung Ersatzfernbedienung






 
 
 









 

	Power		Power
	Input		AV
	Text		Text
	T.Opt		Options
	AD		Subt
	*		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / Quick Access		0
	List		List

Originalfernbedienung Ersatzfernbedienung

	...		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Search		Shift + TV/R
	TV		TV/R
	CH+		Ch +
	CH-		Ch -
	Home		Smart
	Netflix		Shift + Red
	Prime Video		Shift + Green
	Disney+		Shift + Blue
	Rakuten TV		Shift + Yellow
	Up		Up
	Left		Left
	OK		Ok
	Right		Right





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Down		Down
	Back		Back
	Exit		Exit
	Guide		Guide
	Rec		Rec
	Stop		Format
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

