



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	[i+]		Info
	AV1		AV
	AV1		Shift + 1
	Rec/AV2		Shift + 2
	Rec/AV2		Rec
	Stop/AV3		Shift + 3
	Stop/AV3		Stop
	Play/AV4		Shift + 4
	Play/AV4		Play
	AV5		Shift + 5
	AV5		Shift + AV
	Pause/AV6		Shift + 6
	Pause/AV6		Pause
	<</RGB1		Shift + 7
	<</RGB1		<<
	>>/RGB2		>>

**Originalfernbedienung    Ersatzfernbedienung**

	>>/RGB2		Shift + 8
	Menu		Menu
	[>I<]/Recall		Pre Ch
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	J/S.Mode		Shift + Dual
	( I )/P.Mode		Shift + Format
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1









