







 



 





 

 

 

 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------|-------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | FAV / Eject |  | Fav / Marker / PC |
|  | FAV / Eject |  | Eject / Surround |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Scaler |  | Menu / Home |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |



 




















 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|-------------|---------------------------------------------------------------------------------------|-----------------------|
|  | 0 |  | 0 |
|  | -/-- |  | Guide / EPG / -/-- |
|  | Recall |  | Back / Return |
|  | Setup |  | Setup / OPT / |
|  | Exit |  | Exit / Cancel / Clear |
|  | Call |  | Smart / List |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | CH- |  | CH- / Page- |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | Text / Play |  | Text / Goto |










Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------|-------------------------------|
|  | Text / Play |  | Play / Slow |
|  | Mix / Pause/Play |  | Pause / Step / Freeze |
|  | Index / Stop |  | Stop / Hold |
|  | I/II |  | Shift + Audio / Lang I/II |
|  | Cancel / << |  | Shift + Exit / Cancel / Clear |
|  | Cancel / << |  | << / Tune- |
|  | Reveal / >> |  | >> / Tune+ |
|  | Hold / I<< |  | I<< / Preset- |
|  | Hold / I<< |  | Shift + Stop / |
|  | Size / >>I |  | >>I / Preset+ |
|  | Size / >>I |  | Zoom / Size |
|  | Red / Goto |  | Red / Netflix / Search |
|  | Red / Goto |  | Shift + Text / |
|  | Green / A-B |  | Green / APP / Repeat |
|  | Green / A-B |  | Shift + Yellow / YouTube / |
|  | Yellow / Repeat |  | Yellow / YouTube / Repeat |
|  | Yellow / Repeat |  | Shift + Green / APP / Repeat |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|--------------------|---------------------------------------------------------------------------------------|-----------------------------|
|  | Blue / Angle |  | Blue / Prime Video / Random |
|  | Blue / Angle |  | Info / Angle |
|  | S.Page / |  | D.Menu / Top |
|  | Page- / Title |  | Shift + Sound / Title |
|  | Page- / Title |  | Shift + CH- / |
|  | Page+ / PBC |  | Shift + CH+ / |
|  | Audio |  | Audio / Lang I/II |
|  | i / Display |  | Display / Media |
|  | Radio / Zoom- |  | TV/Radio / |
|  | Radio / Zoom- |  | Shift + Down |
|  | EPG / Zoom+ |  | Shift + Up |
|  | EPG / Zoom+ |  | Shift + Guide / EPG / -/- |
|  | S.Title / Subtitle |  | Subtitle / EQ |

