













 

 

 







 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer
	4		4
	5		5
	6		6
	Recall		Back / Return
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	Up		Up
	CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Pg Up		Shift + CH+ /
	Down		Down
	CH-		CH- / Page-
	Pg Dn		Shift + CH- /
	Tv/Radio		TV/Radio /
	Info		Info / Angle
	FAV		Fav / Marker / PC
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	TTX		Text / Goto
	EPG		Guide / EPG / -/-
	Play		Play / Slow





**Originalfernbedienung**    **Ersatzfernbedienung**

	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red/<<		Red / Netflix / Search
	Green/>>		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/PVR		Blue / Prime Video / Random

**Originalfernbedienung**    **Ersatzfernbedienung**