
 
 
 


 
 




 
 





 
 




 






Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute
App		Media
Subt.List		Subt
Sleep Timer		Sleep
TV		TV/R
Video		D. Menu
Text		Text
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down

Originalfernbedienung Ersatzfernbedienung

Back		Back
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
Audio		Dual
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------

FAV Pref.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Auth./DISEQC		Options	
Browse		Smart	

