
 



 
 
 



 





 

 
 









 

 







 

 
 
 
 







 

**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Stop		Stop
Slow Up		Ch +
Pause		Pause
Subt.		Subt
Auto/Track		Smart
Rep/A-B	 + 	Shift + Text
Title		List
Repeat/1/All		Text
DVD/TV		AV
Zoom	 + 	Shift + Eject
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

**Originalfernbedienung Ersatzfernbedienung**

OK Enter		Ok
Menu Right		Right
Return		Back
Menu Down		Down
Volume+		Vol +
Progr.		Sleep
Next		>>
Volume-		Vol -
Prev.		<<
Top Menu		D. Menu
1		1
2		2
3		3
4		4
5		5
6		6
Mark	+	Shift + Ok



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Angle	 Format	0	 0
EQ	 3D	C/CH	 Pre Ch
Audio	 +  Shift + Dual		
7	 7		
F.Forward	 >>		
Clear/00:00	 Exit		
Lang	 Dual		
8	 8		
Video	 Media		
9	 9		
+10	 Guide		
Play	 Play		
Setup	 Options		
Search	 TV/R		
Rewind	 <<		
Open/Close	 Eject		
Record	 Rec		

