 








 







 



 
 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	More		Smart
	Code		Media
	Code		Shift + Media
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Zoom		Eject




 









 


 
 





Originalfernbedienung Ersatzfernbedienung

	OPT		Options
	Red / <<		Red
	Green / Stop		Green
	Yellow /		Yellow
	Blue / >>		Blue
	Red / <<		<<
	Green / Stop		Stop
	Yellow /		Play
	Yellow /		Pause
	Blue / <<		>>
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	TV/Radio		TV/R
	Rec		Rec





**Originalfernbedienung    Ersatzfernbedienung**




 

 
 
 

 

 
 
 
 

 


 

 


 
 
 
 


	Back		Back
	Info		Info
	Prog-		Ch -
	Prog+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	TXT		Text
	Still		Shift + Pause
	Sound		Dual
	PIP		Format
	Menu		Menu
	HDMI		AV

**Originalfernbedienung    Ersatzfernbedienung**

 


 


 
 
 

 

 

 
 
 


 



 





**Originalfernbedienung Ersatzfernbedienung**

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Opt?	 	Options
Subt.List	 	Subt
App	 	Media
Info	 +  	Shift + Info
Sleep Timer	 	Sleep
TV	 	TV/R
Video	 	D. Menu
Text	 	Text
Zoom		Eject
TV/SAT	 	AV
Menu	 	Menu
Menu Up		Up
Display	 	Info
Menu Left		Left

**Originalfernbedienung Ersatzfernbedienung**

 

 
OK Enter		Ok
Menu Right		Right
Exit	 	Exit
Menu Down		Down
Back	 	Back
Audio	 	Dual
Volume+	 	Vol +
CH/Page+	 	Ch +
Volume-	 	Vol -
CH/Page-	 	Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7




 




Originalfernbedienung Ersatzfernbedienung

8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
Dev		List
Home Cinema		Smart
West		I<<
Yellow		Yellow
Freeze		Stop
Blue		Blue
On/Off		Shift + Power
SAT Sky		Shift + AV
H/V Play		Play
East		>>I






 
 





 

 


Originalfernbedienung Ersatzfernbedienung

Lang./Rewind		<<
LNB F.Forward		>>


 

 





 











**Originalfernbedienung Ersatzfernbedienung**

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Sleep Timer		Sleep
Opt?		Options
App		Media
Info	 + 	Shift + Info
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok

**Originalfernbedienung Ersatzfernbedienung**

Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Audio		Dual
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8




**Originalfernbedienung Ersatzfernbedienung**

9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Freeze		Stop
Scan/Setup	+	Shift + Options
Red		Red
Auth./DISEQC		List
Green		Green
Radio	+	Shift + TV/R
Yellow		Yellow
Blue		Blue
Home Cinema		Smart
Alt/16:9		Format
SAT Sky	+	Shift + AV
Dec/Pause		Pause
	+	Shift + Exit

**Originalfernbedienung Ersatzfernbedienung**

East		>>
Lang./Rewind		<<
H/V Play		Play
LNB F.Forward		>>

